



LED Atmosphere Lighting

Operating Instructions


Touch Button Functions



Touch the FWD MODE button to change the brightness of the atmosphere lamps. This button may also be used to turn the atmosphere lamps off. There is also an atmosphere lamp on/off switch on the dashboard to the left of the clock.



Touch the FWD COLOUR button to change the color of the atmosphere lamps when in Monochromatic, Colourful, and Marquee mode.

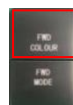

Press and hold the FWD COLOUR button for more than 2 seconds to change the atmosphere lamps mode between Monochromatic, Breathing, Burst, Music rhythm, Colourful, Marquee, Overlay, and Custom mode.

Voice Control Function

To wake up voice operation, say "Hello, Atmosphere Lamp", then say the function you want to control.

To end voice operation, say "Over". Voice operation will automatically terminate after 5 seconds.



Voice Function List

	Voice Commands	Reply	Command Result
1	Turn on the atmosphere lamp	Atmosphere lamp is on	Atmosphere lamp turns on
2	Turn off the atmosphere lamp	Atmosphere lamp is off	Atmosphere lamp turns off
3	Turn up the brightness Turn up	Lamp brightness increases	The brightness of atmosphere lamp is improved
4	Turn down the brightness Turn down	Lamp brightness decreases	The brightness of atmosphere lamp decreases
5	Brightest Maximum brightness	Brightest	Turn the atmosphere light to the brightest
6	Darkest Minimum brightness	Darkest	Turn the atmosphere light to the darkest
7	Brightness to one	Turn the brightness to one	Adjust the brightness of the atmosphere lamp to one
8	Brightness to two	Turn the brightness to two	Adjust the brightness of atmosphere lamp to two



9	Brightness to three	Turn the brightness to three	Adjust the brightness of atmosphere lamp to three
10	Brightness to four	Turn the brightness to four	Adjust the brightness of atmosphere lamp to four
11	Brightness to five	Turn the brightness to five	Adjust the brightness of atmosphere lamp to five
12	Monochrome Monochromatic mode turn to monochrome	Monochromatic mode	Switch to monochrome mode

13	Breathing Breathing mode turn to breathing	Breathing mode	Switch to breathing mode
14	Burst Burst Mode Turn to Burst	Burst mode	Switch to burst mode
15	Music rhythm Music rhythm mode Tune to music rhythm	Music rhythm mode	Switch to music rhythm mode
16	Colorful Colorful mode Turn to colorful	Colorful mode	Switch to colorful mode
17	Marquee Marquee mode turn to marquee	Marquee mode	Switch to marquee mode
18	Overlay Overlay mode Turn to overlay	Overlay mode	Switch to Overlay mode
19	Custom Custom mode Turn to Custom	Custom Mode	Switch to custom mode
20	Red Turn to red	Red	Switch to red
21	Green Turn to green	Green	Switch to green
22	Blue Turn to blue	Blue	Switch to blue
23	Cyan turn to cyan	Cyan	Switch to cyan
24	Purple turn to purple	Purple	Switch to purple
25	Pink Turn to pink	Pink	Switch to Pink
26	White Turn to white	White	Switch to white



27	Yellow Turn to yellow	Yellow	Switch to yellow
28	Orange Turn to orange	Orange	Switch to orange
29	Next Change	Next	Switch to next color
30	Previous	Previous	Switch to previous color
31	Hurry up	Hurry up	Speed up the dynamic display effect of lamp
32	Slow down	Slow down	Slow down the dynamic display effect of lamp